




How to replace memory for the POS?
(Aures POS only)

Make sure you have this icon on your POS system. The instruction is for Aures POS only.



Step 1 Turn off your POS

Turn off POS and disconnect the plug from the power supply. (Make sure power is off)

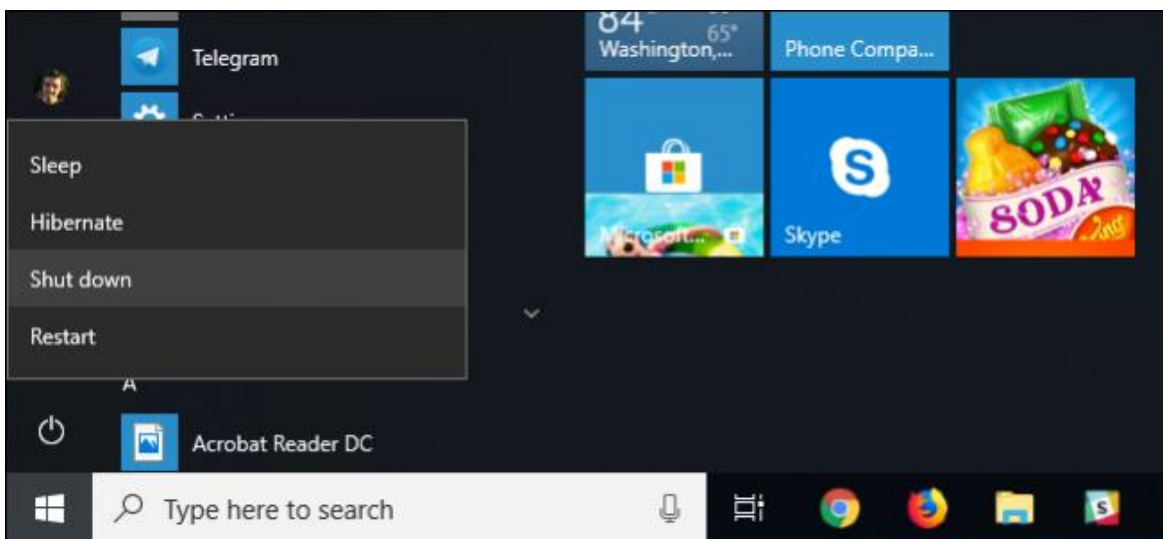

Step 2 Take the back cover off

Remove back cover of the pc by using the button on the bottom,



You will see the green memory module that need to be replaced



Make sure that you touch something metal to discharge any static before starting to remove memory

Step 3 Replace the memory out

There are 2 silver clips holding the memory, these need to be moved at the same time.
Move top clip up



Move bottom clip down

Memory will fold out as below, please note the position of the notch in the gold connector as the new memory will have to go in the same way. Pull out old memory in the direction it's facing



Important: Handle the new memory by the side edges only, avoiding the gold connector strip. Place new memory in slot (make sure that you can't see the gold strip any more) and push lightly on top and bottom until the clips click into place.

Step 4 Put the cover back on

Put cover back on, plug power back in and start pc.